SCOSCHE

KA2091B

IN-DASH DOUBLE DIN INSTALLATION KIT FOR 2007-UP KIA RONDO

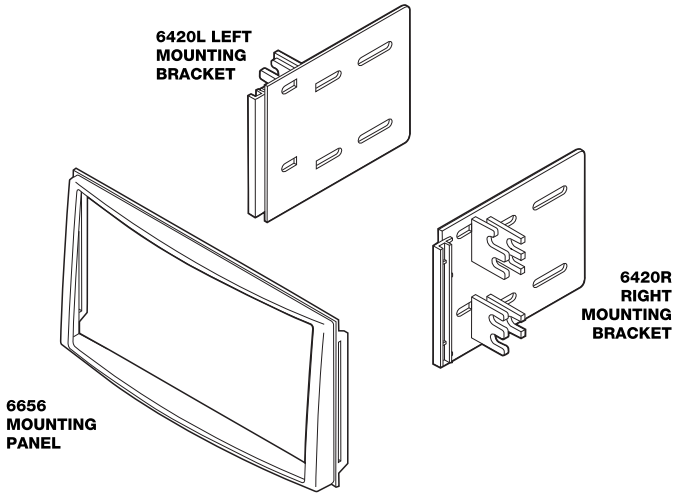

INTRODUCTION/PRELIMINARY

This premium installation kit is for 2007-up Kia Rondo vehicles. Included are all the parts you need to mount your car stereo or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION

DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIRBAG WIRING - AIRBAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo for proper wiring and mounting instructions.

FACTORY WIRING CODES

For Factory Wiring Codes go to: **www.scosche-cars.com**

CAR STEREO CONNECTORS

PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.

KAO1B
2000-UP Kia

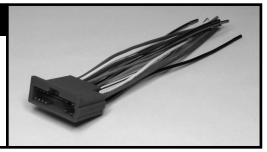

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (KA2091B) in 2007-up Kia Rondo vehicles. Scosche Industries, Inc. cannot be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

©2008 SCOSCHE INDUSTRIES, INC.

SI 7/08 KA2091B (3000003)

FACTORY STEREO REMOVAL

2007-UP KIA RONDO

1. With panel removal tool (PRT) pop up trim around shifter.
2. Remove (4) Phillips screws securing bottom of stereo trim bezel.
3. Starting at bottom, unsnap panel.
4. Disconnect harnesses and remove.
5. Remove (4) Phillips screws securing stereo.

MOUNTING THE STEREO

ATTACHING THE DOUBLE DIN STEREO

1. Snap the left & right mounting brackets to the wedge locations on the mounting panel.
   Note: See below for correct mounting panel and mounting bracket preparation for your vehicle.
2. Align aftermarket stereo with mounting brackets and secure using screws supplied with aftermarket stereo.
   Note: If hardware is not supplied with aftermarket stereo use hardware from factory stereo.

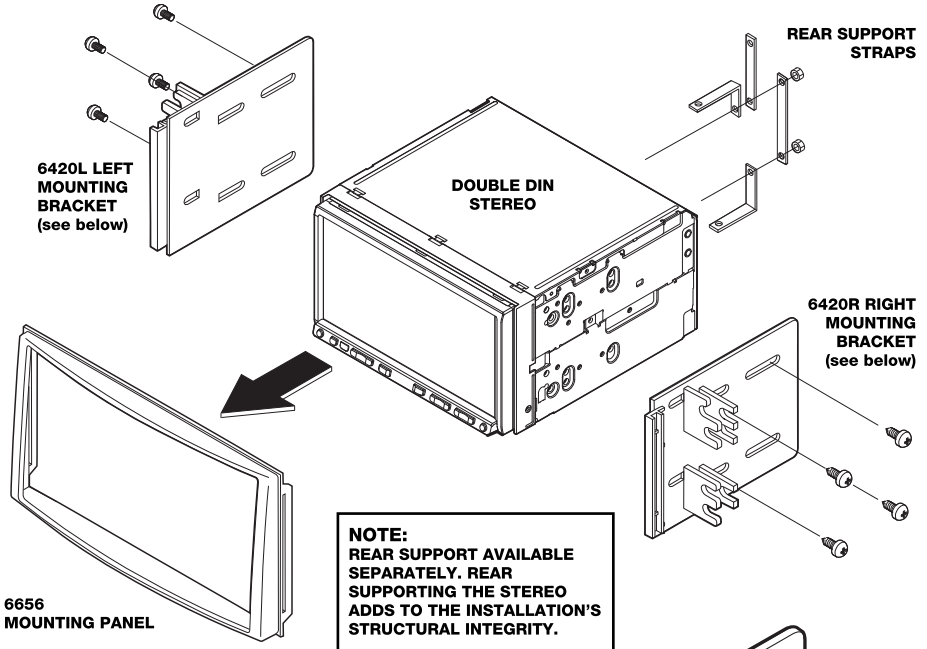
REAR SUPPORT STRAPS
6420L LEFT MOUNTING BRACKET (see below)
DOUBLE DIN STEREO
6420R RIGHT MOUNTING BRACKET (see below)
6656 MOUNTING PANEL
NOTE:
REAR SUPPORT AVAILABLE SEPARATELY. REAR SUPPORTING THE STEREO ADDS TO THE INSTALLATION'S STRUCTURAL INTEGRITY.

MOUNTING BRACKET PREPARATION

Use FRONT mounting tabs on 6420 left & right mounting brackets. (See shaded area, Figure 1) Remove rear tabs and discard.

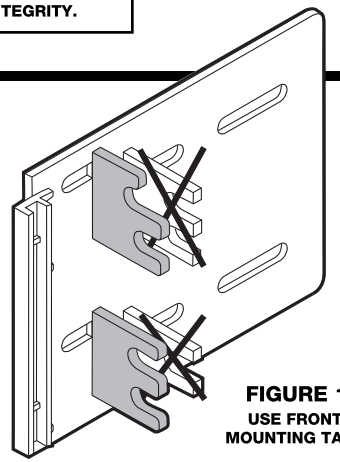

FIGURE 1
USE FRONT MOUNTING TABS